

Glass Candles Care & User Guide

Non-toxic • Non-flammable • Odourless • Smokeless

CARE & SAFETY INSTRUCTIONS

- **EXTREME FRAGILITY:** Glass candles are delicate. Handle with extreme care to prevent injury.
- **NO WATER OR DETERGENTS:** Do not wash candles with water or soap. Any liquid besides authorized candle oil touching the wick will stop it from lighting. Rinse with clear oil only.
- **NO FRAGRANCES:** Do not add essential oils or fragrances to the candle oil.
- **CLEANING ASH:** Wipe wind-blown ash gently using a cloth with a tiny amount of Handy-Andy or Domestos. Avoid chemical contact with the inner oil.

FLAME ADJUSTMENT

- **LARGER FLAME:** Push optic fibre threads upwards gently from the bottom of the wick.
- **SMALLER FLAME:** Pull optic fibres downwards/outwards from the bottom of the wick.
- **DARK COLOUR OILS:** Snip the very tip of the wick if red/blue oil crusts on top.

HOW TO USE YOUR CANDLE

- **PREPARE:** Remove the nozzle lid from the bottle and remove the wick from the candle hole.
- **FILL GENTLY:** Insert the nozzle top into the candle hole. Squeeze oil using *very gentle pressure*.

Important: Excessive bottle pressure can cause an oil spillage ("oil explosion"). Fill slowly!

- **FILL LEVEL:** Always leave ~1cm gap from the filling hole to avoid spills while moving.
- **LIGHT:** Replace the wick and light the optic fibre threads using a lighter.
- **EXTINGUISH:** Blow out candles when done to preserve oil.

GIFTLY SURPRIZE KIMBERLEY • NATIONWIDE COURIER AVAILABLE

📍 70 Mac Dougall Street, Royldene, Kimberley, 8301 | 📞 Call: 053 832 0440 | 💬 WhatsApp: 082 824 3931